




EM82.3 Client

The EM82.3 Client Library offers the option of connecting to liquid silicone dosing devices via Euro-map 82.3 communication. The SIGMATEK system works as an OPC UA client.

The Euromap 82.3 standard describes a uniform interface between injection molding machines and dosing devices (LDS = liquid silicone rubber dosing system) and offers options for reading out status information, setting target values, transmitting alarms and much more.

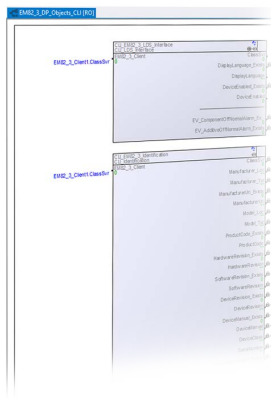

FEATURES

- OPC UA-based interface for liquid silicone dispensers (LDS)
- Alarm transmission
- Prefabricated data point objects for data storage
- Secure communication via SSL encryption

FACTS

Development environment	LASAL CLASS 2
Article number	02-010-080-3
Performance index	A B C D E