


DC 062(-X)

S-DIAS Axis Module

INSTRUCTION MANUAL

Article number:	20-014-062-E
Date of creation:	13.01.2015
Version date:	15.05.2026

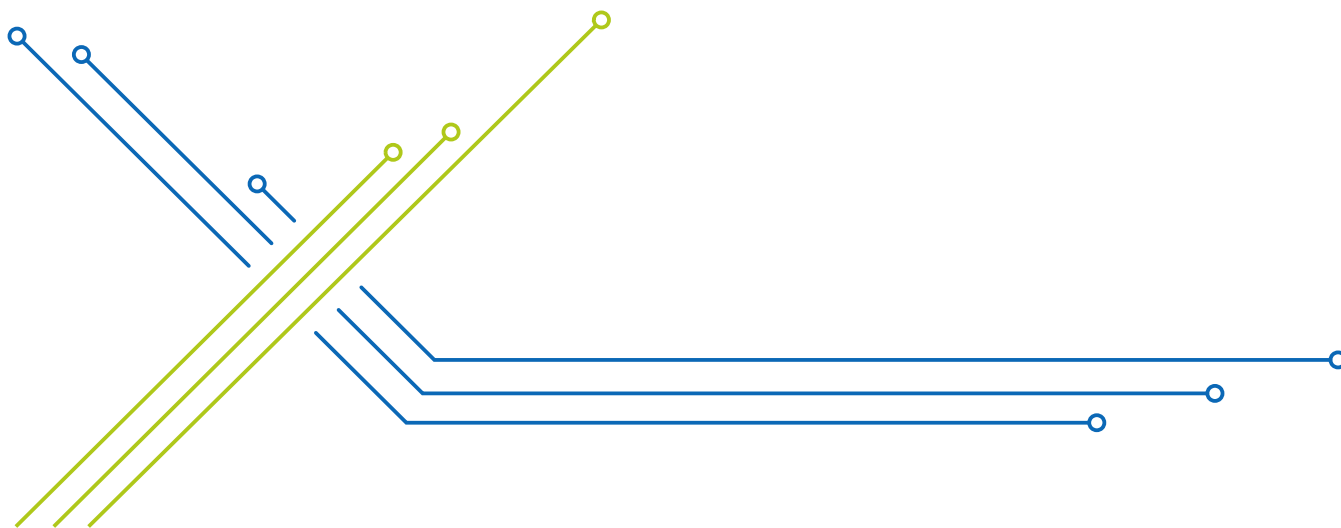

Publisher:

SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18

Email: office@sigmatek.at
www.sigmathek-automation.com

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without express permission.

We reserve the right to make changes in the content without notice. SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in this handbook and assumes no responsibility for damages that occur through its use.

S-DIAS Axis Module**DC 062(-X)****1 motor output stage****1 incremental encoder input****1 holding brake**

The S-DIAS Axis Module DC 062(-X) is used to control a brushless DC motor with a +48 V supply voltage and phase current of up to 6 A. An incremental encoder input is available for position feedback. A +24 V output for connecting a holding brake is provided. External Regen brake can also be connected.

This instruction manual also applies to the product DC 062-X (main board and S-DIAS connectors coated in Purocoat (Certonal)), which is no longer explicitly mentioned in the following.

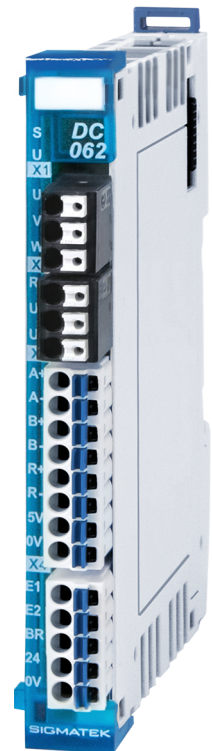


Table of Contents

1 Introduction	4
1.1 Target Group/Purpose of this Operating Manual	4
1.2 Important Reference Documentation	4
1.3 Contents of Delivery	4
2 Basic Safety Directives	5
2.1 Symbols Used	5
2.2 Disclaimer	6
2.3 General Safety Directives	6
2.4 Designated Use	8
2.5 Software/Training	9
3 IT Security	10
4 Standards and Directives	11
4.1 Residual Risks	11
4.2 Safety of the Machine or Equipment	11
4.3 Directives	11
4.3.1 Functional Safety Standards	11
4.3.2 EU Declaration of Conformity	12
4.4 Safety-Relevant Parameters	12
4.5 Compatibility	12
5 Type Plate	13
6 Technical Data	14
6.1 Motor Driver Specifications	14
6.2 Incremental Encoder Specifications	14
6.3 Regen Brake Specifications	15
6.4 Enable Inputs Specifications	16
6.5 Holding Brake Specifications	16
6.6 Electrical Requirements	16
6.7 Miscellaneous	19
6.8 Environmental Conditions	19
7 Mechanical Dimensions	20
8 Connector Layout	21

8.1 Status LEDs	22
8.2 Applicable Connectors	23
8.3 Label Field	24
9 Wiring	25
9.1 Wiring Example	25
9.2 Note	26
9.3 Wiring SM Motors with Tyco Connector	26
9.4 Servo Motor and Encoder Cables	27
10 Motor Overload Protection	28
11 Additional Safety Information	29
11.1 STO	32
11.2 Function	32
11.3 Function Test	32
12 Wiring Examples	33
12.1 Performance Level e, Category 4 or SIL 3 - Safety PLC	33
12.2 Performance Level e, Category 3 or SIL 3 - Safety PLC	35
12.3 Performance Level e, Category 4 or SIL 3 - Conventional	37
12.4 Performance Level e, Category 2 or SIL 2 - Conventional	39
13 Assembly/Installation	41
13.1 Check Contents of Delivery	41
13.2 Mounting	41
14 Transport/Storage	43
15 Storage	44
16 Maintenance	45
16.1 Service	45
16.2 Repair	45
17 Disposal	46
18 Supported Cycle Times	47
18.1 Cycle Times below 1 ms (in μ s)	47
18.2 Cycle Times equal to or higher than 1 ms (in ms)	47

1 Introduction

1.1 Target Group/Purpose of this Operating Manual

This operating manual contains all information required for the operation of the product.

This operating manual is intended for:

- Project planners
- Technicians
- Commissioning engineers
- Machine operators
- Maintenance/test technicians

General knowledge of automation technology is required.

Further help and training information, as well as the appropriate accessories can be found on our website www.sigmatek-automation.com.

Our support team is happily available to answer your questions or assist you in case of any issues. Please see our website for our hotline number and business hours.

1.2 Important Reference Documentation

- Safety System Handbook

This and additional documents can be downloaded from our website or obtained through support.

1.3 Contents of Delivery

1x DC 062(-X)

2 Basic Safety Directives

2.1 Symbols Used

The following symbols are used in the operator documentation for warning and danger messages, as well as informational notes.



DANGER

Danger indicates that death or serious injury **will occur**, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Danger indique une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.



WARNING

Warning indicates that death or serious injury **can** occur, if the specified measures are not taken.

→ To avoid death or serious injuries, observe all guidelines.

Avertissement d'une situation dangereuse qui, faute de prendre les mesures adéquates, **entraînera** des blessures graves, voire mortelles.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.



CAUTION

Caution indicates that moderate to slight injury **can** occur, if the specified measures are not taken.

→ To avoid moderate to slight injuries, observe all guidelines.

Attention indique une situation dangereuse qui, faute de prendre les mesures adéquates, **peut** entraîner des blessures assez graves ou légères.

→ Respectez toutes les consignes pour éviter des blessures graves, voire mortelles.



DANGER

Electrical voltage

Tension électrique



WARNING

Hot Surfaces

Surfaces chaudes

CAUTION

Danger for ESD-sensitive components.

Les signes de danger pour les composants sensibles aux décharges électrostatiques.

INFORMATION**INFORMATION**

- Provides important information on the product, handling or relevant sections of the documentation, which require particular attention.

2.2 Disclaimer

The contents of this operating manual were prepared with the greatest care. However, deviations cannot be ruled out. This operating manual is regularly checked and required corrections are included in the subsequent versions. The machine manufacturer is responsible for the proper assembly, as well as device configuration. The machine operator is responsible for safe handling, as well as proper operation.

The current operating manual can be found on our website. If necessary, contact our support.

Subject to technical changes, which improve the performance of the devices. The following operating manual is purely a product description. It does not guarantee properties under the warranty.

Please thoroughly read the corresponding documents and this operating manual before handling a product.

SIGMATEK GmbH & Co KG is not liable for damages caused through, non-compliance with these instructions or applicable regulations.

2.3 General Safety Directives

The Safety Directives in the other sections of this operating manual must be observed. These instructions are visually emphasized by symbols.

According to EU Directives, the operating manual is a component of a product. This operating manual must therefore be accessible in the vicinity of the machine since it contains important instructions. This operating manual should be included in the sale, rental or transfer of the product, or its online availability indicated.

Regarding the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine directives 2006/42/EG before introducing a machine to the market.

INFORMATION

Operate the unit with devices and accessories approved by SIGMATEK only.

CAUTION

Handle the device with care and do not drop or let fall.
Prevent foreign bodies and fluids from entering the device.
The device must not be opened!

Manipulez l'appareil avec précaution et ne le laissez pas tomber.
Empêchez les corps étrangers et les liquides de pénétrer dans l'appareil.
L'appareil ne doit pas être ouvert!

If the device does not function as intended or has damage that could pose a danger, it must be replaced!

En cas de fonctionnement non conforme ou de dommages pouvant entraîner des risques, l'appareil doit être remplacé !

For your own safety and that of others, compliance with the environmental conditions is essential.

Pour votre propre sécurité et celle des autres, le respect des conditions environnementales est essentiel.

2.4 Designated Use

The Safety functions implemented in the product are designed for use with safety applications in a PLC control and meet the required conditions for safe operation.

CAUTION



The instructions contained in this operating manual must be followed. For error-free operation, proper transport and storage are essential.

Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.

Qualified personnel in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict directives and standards of safety technology (Functional Safety).

Les instructions contenues dans ce manuel technique doivent être suivies.

Pour un fonctionnement sans erreur, le transport et le stockage appropriés sont essentiels.

L'installation, le montage, la programmation, la mise en service initiale, l'exploitation, la maintenance et la mise hors service ne peuvent être effectués que par une personne qualifiée.

Dans ce contexte, on entend par personnel qualifié les personnes qui ont suivi une formation ou qui ont été formées sous la supervision d'un personnel qualifié et qui ont été autorisées à utiliser et à entretenir l'équipement, les systèmes et les installations de sécurité conformément aux directives et aux normes strictes de la technique de sécurité (Sécurité fonctionnelle).

For your own safety and that of others, the product should be used for their designated purpose only.

Correct EMC installation is also included under designated use.

Pour votre propre sécurité et celle des autres, le produit ne doivent être utilisés qu'à des fins prévues.

Une installation CEM correcte est également incluse dans l'utilisation prévue.

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this operating manual or the specifications defined in the technical data.

L'utilisation non désignée consiste en:

- toute modification apportée au module ou l'utilisation des modules endommagés.
- utilisation du module non conforme aux marges techniques décrites dans ce manuel ou aux spécifications définies dans les données techniques.

2.5 Software/Training

The application is created with the software LASAL CLASS 2 and LASAL SCREEN Editor, the Safety application is created using the SAFETYDesigner. Basic information on Safety (Functional Safety) can be found in the Safety System Handbook.

Training for the LASAL development environment, with which the product can be configured, is provided. Information on our training schedule can be found on our website.

3 IT Security

S-DIAS safety modules were developed for integration into a network protected against unauthorized access.

For example, the following dangers can affect the network:

- Unauthorized access
- Data manipulation
- and many other IT security violations

It is the responsibility of the integrator or operator to carry out a risk analysis of the connections between S-DIAS modules and the integration into the overall infrastructure. The following measures, for example, may result from this (if necessary):

- Separation of IT/OT networks (VLANs or physical)
- Firewalls
- Password-protected user accounts
- Data encryption
- and much more

With regard to the functional safety objective, in this case the STO safety function, no direct effects on the function or its integrity are possible, since the function cannot be influenced via communication-based interfaces.

The availability of the overall system (as with all safety functions) can be compromised by external attacks, hence the above measures are necessary.

4 Standards and Directives

4.1 Residual Risks



CAUTION

The following residual risks for the product must be included in the system integrator's risk assessment:

- Release of non-environmentally safe substances, emissions and unusual temperatures
- Hazardous contact voltages
- Effects of operational electrical, magnetic and electromagnetic fields
- Possible effects of information technology devices

Les risques résiduels suivants pour le produit doivent être inclus dans l'évaluation des risques de l'intégrateur de système :

- Libération de substances non respectueuses de l'environnement, émissions et températures inhabituelles
- Tensions de contact dangereuses
- Effets des champs électriques, magnétiques et électromagnétiques opérationnels
- Effets possibles des dispositifs de technologie de l'information

4.2 Safety of the Machine or Equipment

Observe all on-site rules and regulations for accident prevention and occupational safety.

4.3 Directives

The product was constructed in compliance with the following European Union directives and tested for conformity.

4.3.1 Functional Safety Standards

EN IEC 62061	Safety of machinery - Functional safety of safety-related control systems
EN ISO 13849-1	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN ISO 13849-2	Safety of machinery - Safety-related parts of control systems - Part 2: Validation
EN IEC 61508-1	Functional safety - Part 1: General requirements
EN IEC 61508-2	Functional safety - Part 2: Requirements for electrical / electronic / programmable electronic safety-related systems
EN IEC 61508-3	Functional safety - Part 3: Software requirements

The issue status of the applied standards can be found in the EU declaration of conformity.

4.3.2 EU Declaration of Conformity



EU Declaration of Conformity

The product DC 062(-X) conforms to the following European directives:

- 2006/42/EG Machine Directive
- 2014/30/EU Electromagnetic Compatibility (EMC Directive)
- 2011/65/EU "Restricted use of certain hazardous substances in electrical and electronic equipment" (RoHS Directive)

The EU Conformity Declarations are provided on the SIGMATEK website. They can be found in the download area of the respective product.

4.4 Safety-Relevant Parameters

DC 062(-X)	Safety Parameters	Safety Level
Safety function STO	PFH = 4.80E-10 (1/h)	SIL 3 according to EN IEC 62061
	SFF = 99 %	
	MTTF _D = 5387 years	PL e / Cat. 4 according to EN ISO 13849
	DC = 96 %	

4.5 Compatibility

INFORMATION



Compatibility

For compatibility of the S-DIAS Safety modules, see section "Compatibility of S-DIAS Safety Modules" in the system handbook.

5 Type Plate

The type plate provides information about the product's features. The type plate shown here is only an example.

Approbations		Standards
QR-Code  BJ: XXXX/XX S/N XXXXXXXX	Short Name Specifications FS: XXX.XX.XX FW: XXX LD: XX.X HW: X.XX	Electrical Ratings  SIGMATEK Sigmathekstraße 1 A-5112 Lamprechtshausen www.sigmatek-automation.com
Article Number		Product Name

- HW: Hardware version
- FS: Safety version number
- FW: Firmware version
- LD: Logic device version
- QR-Code: Serial number

6 Technical Data

6.1 Motor Driver Specifications

Type	brushless DC
Operating voltage	+24-55 V
Maximum continuous current	6 A
Maximum peak current (10 s)	15 A
Controller frequency	16 kHz
PWM frequency	16 kHz
Overload protection	short circuit cutoff
	temperature monitoring
	I ² t monitor
	overvoltage and under voltage monitoring

6.2 Incremental Encoder Specifications

Number	1
Input signals ¹⁾	Incremental encoder signals RS422 (A, /A, B, /B, R, /R)
	RS422 level (120 Ω termination, integrated in module)
	Incremental encoder signal TTL (A, B, R)
	TTL level (1200 Ω pull-up, integrated in module)
Input frequency	maximum 125 kHz
Counter frequency	maximum 500 kHz
Signal analysis	4x
Counter resolution	16 bits
Encoder power supply	+5 V/0.2 A short-circuit proof

INFORMATION



Commutation Search

The DC 062(-X) with incremental encoder runs a commutation search during the enable process, which can take several seconds. If the motor has a brake, it can lead to problems when it allows insufficient play for the increment change required for the commutation search.

¹⁾ The software switch-over from RS422 to TTL incremental encoder signals is carried out via bit 5 in the motor parameter A-ACME (bit 5 = 0 -> RS422 [default]; bit 5 = 1 -> TTL).

6.3 Regen Brake Specifications

Type	external power resistor
Output	GND switching
Maximum current	10 A ¹⁾
Lowest possible resistance	6 Ω ²⁾
Short-circuit protection	yes
Threshold regen braking on/off	60 V/55 V

WARNING



- Hot surface warning!
- A burn hazard exists with physical contact!
- During operation, the surface of the brake resistor can become very hot and remain hot sometime after operation.

Avoid physical contact with the surface of the brake resistor, and for a significant time after operation as well.

- Avertissement de surface chaude!
- Il existe un risque de brûlure par contact physique!
- Pendant le fonctionnement, la surface de la résistance de freinage peut devenir très chaude et rester chaude quelque temps après le fonctionnement.

Eviter tout contact physique avec la surface de la résistance de freinage, ainsi que pendant une longue période après le fonctionnement.

¹⁾ Regen braking must be dimensioned according to the application. For most applications, a 10 Ω /50 W resistor is sufficient. If multiple DC 062(-X) are driven with one intermediate circuit supply, it is possible to equip only one module with regen braking. The recommended regen resistor (15 Ω / 100 W) is available at SIGMATEK under the article number 20-014-061-Z1.

²⁾ The resistance must be dimensioned based on its maximum power dissipation corresponding to the braking power generated in the application. However, the permissible short-term power generated must be at least $P=U^2/R$, meaning $60^2/R$.

6.4 Enable Inputs Specifications

Number	2	
Input voltage	+24 V	
Input voltage range	+18-30 V	
Signal level	low: $\leq +5 \text{ V}$	high: $\geq +15 \text{ V}$
Switching threshold	typically +11 V	
Input current	3 mA at +24 V DC	
Input delay	typically 0.5 ms	
Output test signal control	maximum 1.5 ms	

6.5 Holding Brake Specifications

Output voltage	+24 V
Maximum continuous current	500 mA
Short-circuit protection	yes
Maximum cut-off energy (inductive load)	50 mJ

6.6 Electrical Requirements

Supply voltage +24 V(X4)	+18-30 V, Class 2 ¹⁾	
Current consumption of the +24 V supply	load-dependent (holding brake)	
Supply voltage motor (X2)	+24-55 V DC ²⁾	
Switching threshold for motor voltage monitor	minimum +18 V	maximum +65 V
Current consumption supply voltage Motor	load-dependent (motor)	
Voltage supply from S-DIAS bus	+5 V	
Current consumption on the S-DIAS bus (+5 V supply)	-	-
Supply from S-DIAS bus	+24 V	
Current consumption on the S-DIAS bus (+24 V supply)	typically 70 mA	maximum 80 mA

INFORMATION



1) For USA and Canada:

Only suitable for connection to secondary isolated power supply rated 24 V DC, class 2 or fuse rated max. 4 A in accordance with UL 248 shall be connected in the field between the supply source and device terminals.

2) The motor supply (X2) must be connected with an intermediate circuit capacitance appropriate for the application (at least 2000 μF /100 V).

Attention must be paid to short cables and appropriate cable cross-sections. (maximum 15 cm between module and capacitor / 1.5 mm²)


Braking a DC motor:

When braking a DC motor, a generative process can occur whereby the kinetic energy of the motor is converted into electrical energy. The energy of the motor is thereby fed back into the supply of the DC motor output stage; this then increases the supply voltage. It should be noted that the feedback voltage supply voltage of 65 V cannot be exceeded! The external capacity of the motor supply is may be needed. If the capacitors in the power supply are insufficient, a regen resistor, which converts the excess energy into heat must be connected to the DC motor output stage. When selecting the power supply, it is important to ensure that it is appropriately feedback-resistant up to the maximum regenerative voltage that occurs.

Use only conductors, which are rated for at least 75 °C!

There is no motor thermostat analysis in the motor output.

Incorrectly set parameter or incorrect wiring can lead to destruction of the motor. In particular, motor currents and the I²T settings (A-I2TT, A-I2TERR) must be monitored, which can be parameterized in the DIAS-Drive Editor via the LASAL CLASS 2 tool. Only motors in a star configuration can be used.

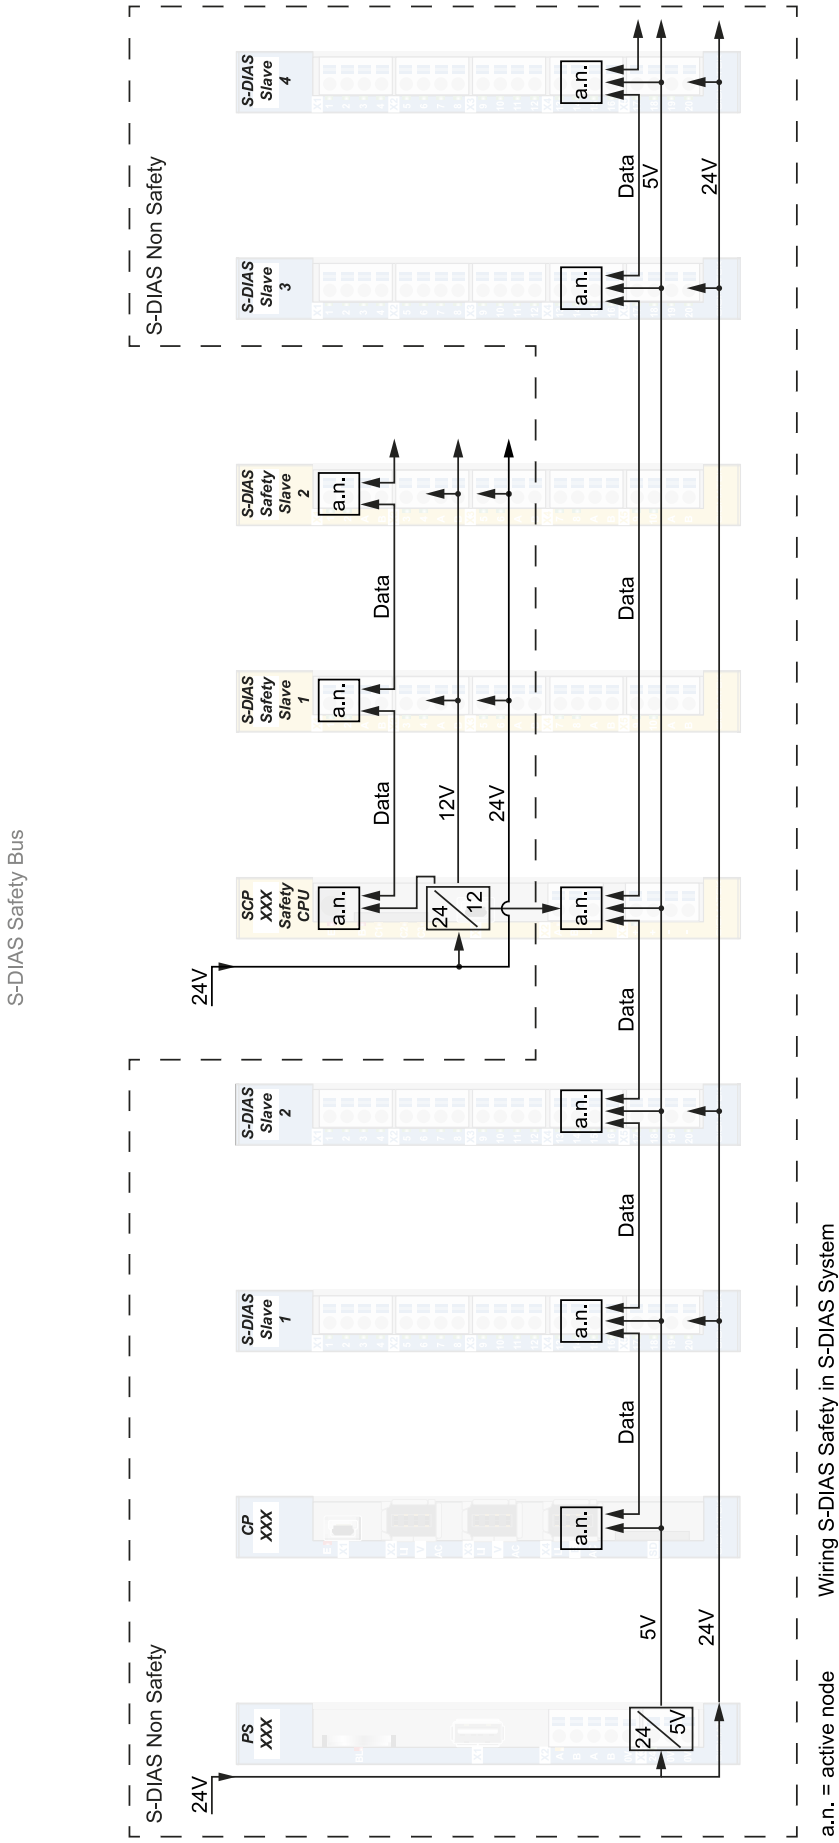

- each S-DIAS module is an active module (active node)
- Safety CPU is connected to the S-DIAS bus (incl. +5 V supply)
- Safety bus is independent and separated from the S-DIAS bus


6.7 Miscellaneous

Article number	20-014-062	
Printed circuit board coating	20-014-062-X (Printed circuit board with protective lacquer)	
Approvals	CE	yes
	UL	cULus (E336350)
	Functional Safety	yes, EG-type-examined
	UKCA	no
Mission time	20 years	

6.8 Environmental Conditions


Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +50 °C	
Humidity	0-95 %, non-condensing	
Installation altitude above sea level	0-2000 m without derating > 2000 m up to a maximum of 5000 m with derating of the maximum environmental temperature by 0.5 °C per 100 m	
Operating conditions	pollution degree 2	
Noise emission	≤ 70 dB	
EMC resistance	EN 61000-6-2 (industrial area) EN 61000-6-7 (immunity industry functional safety) (increased requirements according to EN IEC 62061)	
	additionally tested in accordance with EN 61800-5-2 (safety requirements - functional safety)	
EMC noise generation	EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm von 5-8.4 Hz 1 g von 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g (147.15 m/s ²)
Protection type	EN 60529	IP20 (not evaluated by UL)

7 Mechanical Dimensions

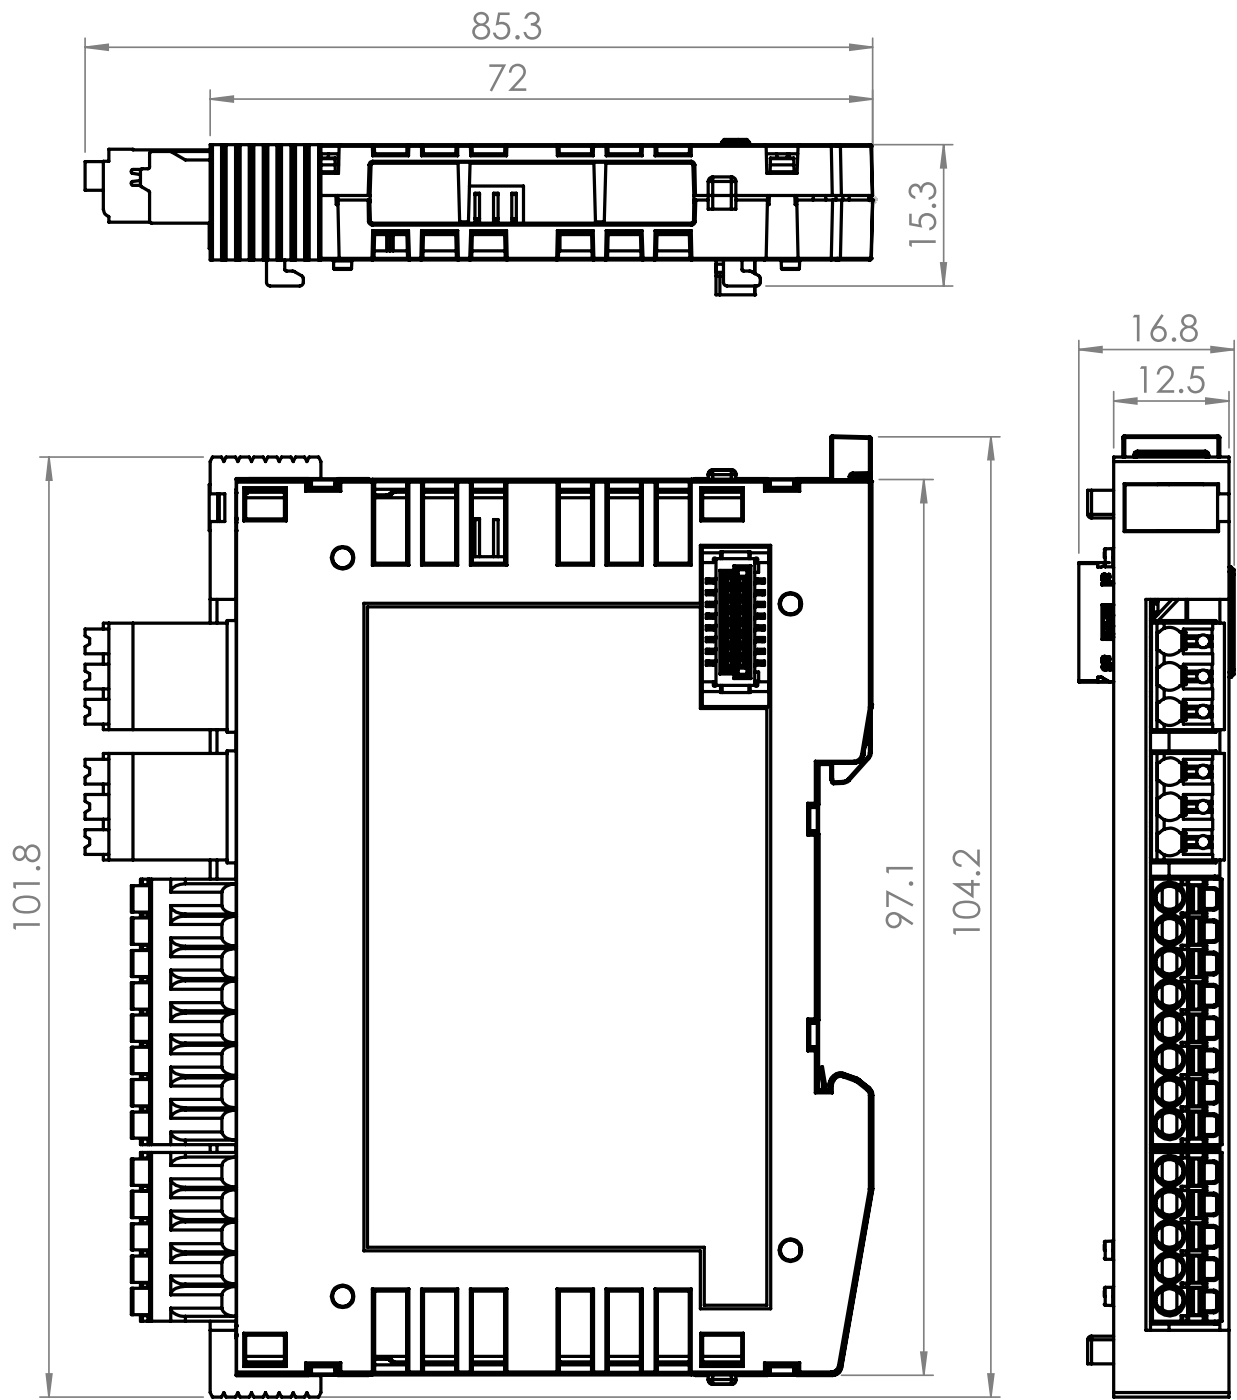

Measurements	12.5 x 104 x 72 mm (W x H x D)
--------------	--------------------------------

8 Connector Layout

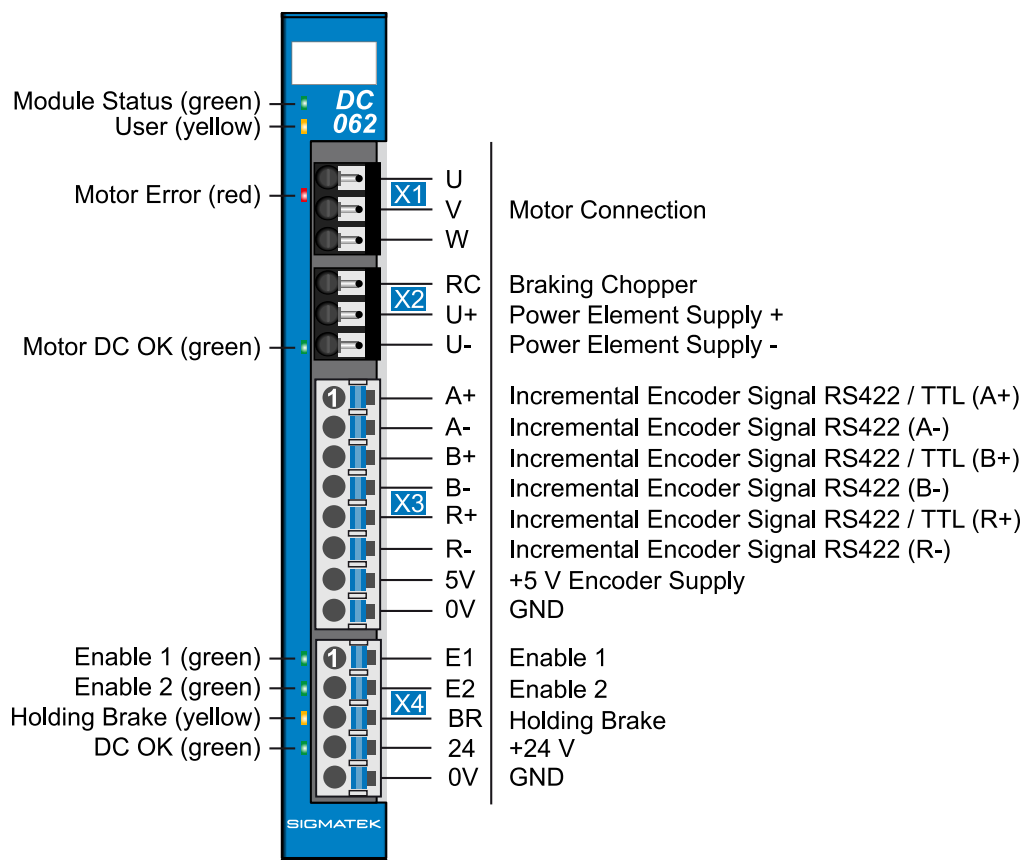

8.1 Status LEDs

Module status	green	ON	module active
		OFF	no supply available
		BLINKING (5 Hz)	no communication
User	yellow	ON	adjustable by application (e.g. the module LED can be set to blinking through the visualization so that the module is easily found in the control cabinet)
		OFF	
		BLINKING (2 Hz)	
		BLINKING (4 Hz)	
Motor error	red	BLINKING	motor output stage error
		OFF	normal operation
Motor DC OK	green	ON	power applied and motor active
		OFF	no motor supply voltage
		BLINKING	power applied, but motor inactive
Enable 1	green	ON	enable 1 high
		OFF	enable 1 low
Enable 2	green	ON	enable 2 high
		OFF	enable 2 low
Holding brake	yellow	ON	output active (brake released)
		OFF	output inactive
DC OK	green	ON	+24 V supply ok
		OFF	+24 V missing or voltage too low
		BLINKING	+24 V DC voltage supply too high

8.2 Applicable Connectors


X1, X2: Weidmüller socket connectors with spring terminals (included in delivery)

X3, X4: Phoenix connector plugs with spring terminals (included in delivery)

The spring terminals are suited for the connection of ultrasonically compacted (ultrasonically welded) stranded wire.

Connection capacity Phoenix connectors:

Stripping length/sleeve length	10 mm
Mating direction	parallel to conductor axis or to circuit board
Conductor cross section rigid	0.2-1.5 mm ²
Conductor cross section flexible	0.2-1.5 mm ²
Conductor cross section, ultrasonically compacted	0.2-1.5 mm ²
Conductor cross section AWG/kcmil	24-16
Conductor cross section flexible with ferrule without plastic sleeve	0.25-1.5 mm ²
Conductor cross section flexible with ferrule with plastic sleeve	0.25-0.75 mm ² (reason for reducing d2 of the ferrule)

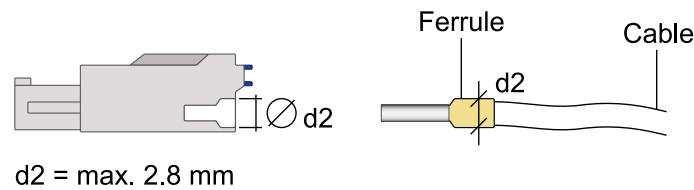

Weidmüller connector capacity:

Stripping length/sleeve length	9 mm
Mating direction	parallel to the conductor axis or circuit board
Conductor cross section rigid H05(07) V-U	0.14-1.5 mm ²
Conductor cross section flexible H05(07) V-K	0.14-1.5 mm ²
Conductor cross section, ultrasonically compacted	0.14-1.5 mm ²
Conductor cross section AWG/kcmil	26-16
Conductor cross section flexible with ferrule without plastic sleeve (DIN 46228-1)	0.25-1.5 mm ²
Conductor cross section flexible, with ferrule with plastic sleeve (DIN 46228-4)	0.25-1 mm ² (reason for reduction d2 of the ferrule)




CAUTION



The S-DIAS module **CANNOT** be connected/disconnected while voltage is applied!


8.3 Label Field

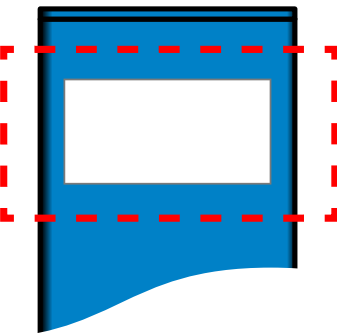

The labeling field is printed directly on the module.

9 Wiring

9.1 Wiring Example

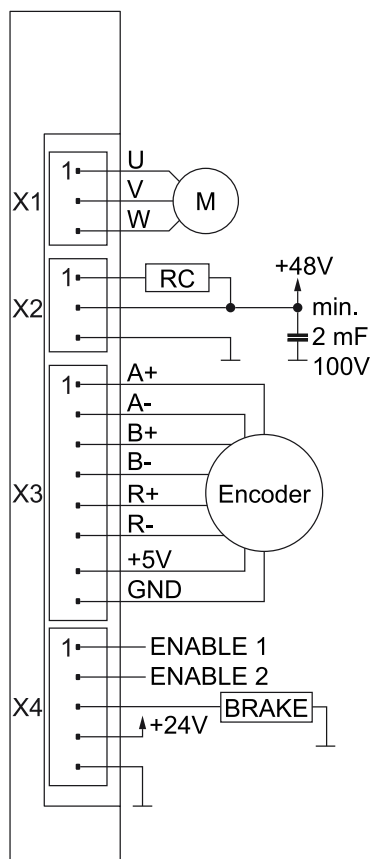

INFORMATION



Use wires only that are allowed for at least 75 °C!

9.2 Note

The following installation guidelines should be observed:

INFORMATION



The ground bus should be connected to the control cabinet when possible!

9.3 Wiring SM Motors with Tyco Connector

With Holding Brake	Length
M062E-10-1-015-2-0	1.5 m
M062E-10-1-030-2-0	3.0 m
M062E-10-1-050-2-0	5.0 m
M062E-10-1-100-2-0	10.0 m

Without Holding Brake	Length
M062E-10-0-015-2-0	1.5 m
M062E-10-0-030-2-0	3.0 m
M062E-10-0-050-2-0	5.0 m
M062E-10-0-100-2-0	10.0 m

INFORMATION



The Shielding/PE connections of the motor cable, as well as the encoder cable shielding must be grounded via the 6.3 mm blade receptacle provided on the respective cables. With increased interference, it may be necessary to also connect the motor and encoder cable on the motor side.

If the Tyco connector could experience strain during use, it must be equipped with proper strain relief directly before and after the connector.

9.4 Servo Motor and Encoder Cables

Highly flexible servo motor and encoder cables for use in energy supply chains. The oil-resistant, abrasion- and cut-resistant polyurethane jacket allows use especially in industrial environments.

Advantages:

UL and CSA approved, halogen-free, flame-resistant and cold-resistant. The cables are available in fixed prefabricated lengths.

Temperature range	
flexible: -10 °C bis +60 °C	fixed: -50 °C bis +80 °C

INFORMATION



Use wires rated for at least 75 °C.

Minimum bending radius	
Servo motor cable	
Fixed installation:	7.5 x D / Flexible use: 10 x D
Resolver cable	
Fixed installation:	4 x D / Flexible use: 7.5 x D

10 Motor Overload Protection

The device has no integrated motor overload protection. External or remote overload protection in accordance with National Electrical Code and any additional local codes must be provided in the field. Motor overtemperature sensing is not provided by the drive.

11 Additional Safety Information

The Safety function “STO” is an integrated part of the DC motor output stage. It meets all necessary requirements for safe operation in SIL 3 according to EN IEC 62061 and in compliance with PL e. Cat. 4 in accordance with EN ISO 13849-1.

CAUTION



The instructions contained in this document must be followed.

- The DC 062(-X) can only be powered by supplies that meet the requirements for SELV or PELV in compliance with EN 60204.
For error-free operation, proper transport and storage are essential. See chapter 14 Transport/Storage.
- Installation, mounting, programming, initial start-up, operation, maintenance and decommissioning can only be performed by qualified personnel.
- Qualified personnel in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict guidelines and standards of safety technology.

For your own safety and that of others, the safety modules should be used for their designated purpose only. Correct EMC installation is also included in the designated use.

ATTENTION



Les instructions contenues dans ce document doivent être suivies.

- Pour un fonctionnement sans erreur, le transport et le stockage appropriés sont essentiels. Voir le chapitre 14 Transport/Storage pour plus d'informations.
- L'installation, le montage, la programmation, la mise en service initiale, l'exploitation, la maintenance et la mise hors service ne peuvent être effectués que par une personne qualifiée.
- Dans ce contexte, on entend par personnel qualifié les personnes qui ont suivi une formation ou qui ont été formées sous la supervision d'un personnel qualifié et qui ont été autorisées à utiliser et à entretenir l'équipement, les systèmes et les installations de sécurité conformément aux directives et aux normes strictes de la technique de sécurité.

Pour votre propre sécurité et celle des autres, les modules de sécurité ne doivent être utilisés qu'à des fins prévues. Une installation CEM correcte est également incluse dans l'utilisation prévue.

CAUTION

Non-designated use consists of:

- any changes made to the module or the use of damaged modules.
- use of the module inconsistent with the technical margins described in this manual or the specification's defined in the technical data (see chapter 6 Technical Data).

The main power supply for the servo amplifier must be disconnected using the main switch for the following instances:

- Cleaning, maintenance or repairs
- Extended still-stand periods

CAUTION

L'utilisation non désignée consiste en:

- toute modification apportée au module ou l'utilisation des modules endommagés.
- utilisation du module non conforme aux marges techniques décrites dans ce manuel ou aux spécifications définies dans les données techniques (voir chapitre 6 Technical Data).

L'alimentation principale du variateur doit être débranchée à l'aide de l'interrupteur principal dans les cas suivants:

- Nettoyage, entretien ou réparation
- périodes d'immobilisation prolongées

DANGER

Failure to follow the above safety measures can lead to severe injuries.

- Only trained personnel are authorized to install the "safe restart lock" STO (Safe Torque off) and set the parameters.
- All control devices (switches, relays, PLC, etc.) and the control cabinet must meet the requirements for EN ISO 13849.
This includes:
 - Door switches, etc. with at least IP54 protection.
 - Control cabinet with at least IP54 protection.
- Appropriate cables must be used, and proper cable termination on the module side must be ensured (see the chapter "8.2 Applicable Connectors" => Connection capacity).
- All cables that affect safety (e.g. control cables for the ENABLE 1 and ENABLE 2 inputs) must be laid in a cable duct outside of the control cabinet: Short or crossed circuits in the signal lines must be avoided! See EN ISO 13849.

DANGER

Le non-respect des mesures de sécurité ci-dessus peut entraîner des blessures graves.

- Seul un personnel qualifié est autorisé à installer le "blocage de redémarrage sûr" STO (Safe Torque off) et à régler les paramètres.
- Tous les appareils de commande (interrupteurs, relais, API, etc.) et l'armoire de commande doivent satisfaire aux exigences de la norme EN ISO 13849. Il s'agit des éléments suivants :
 - interrupteurs de porte, etc. avec une protection d'au moins IP54
 - armoire de commande avec une protection d'au moins IP54.
- Il convient d'utiliser des câbles adaptés et de veiller à ce que les extrémités des câbles soient correctement raccordées côté module (voir le chapitre 8.2 Applicable Connectors" => Connection capacity).
- Tous les câbles affectant la sécurité (par ex. les câbles de commande pour les entrées ENABLE 1 et ENABLE 2) doivent être posés dans un conduit de câbles de raccordement à l'extérieur de l'armoire électrique. Éviter les courts-circuits ou les courts-circuits croisés dans les lignes de signalisation! Voir EN ISO 13849.

DANGER

If external forces influence axes that are used with the STO safety function (e.g. hanging load), additional measures must be taken (such as an electromagnetic double-surface spring brake, instead of a permanent magnet brake).

Si des forces externes influencent les axes utilisés avec la fonction de sécurité STO (par ex. charge suspendue), des mesures supplémentaires doivent être prises (par ex. un frein à ressort électromagnétique à double surface au lieu d'un frein à aimant permanent).

WARNING

Hot surface warning!

Physical contact poses a burn hazard!

With unfavorable installation and operating conditions, the surface of the S-DIAS drive module can reach temperatures up to 84 °C and remain hot for some time after operation.

Avertissement de surface chaude !

Le contact physique présente un risque de brûlure !

En cas de conditions d'installation et de fonctionnement défavorables, la surface du module d'entraînement S-DIAS peut atteindre des températures allant jusqu'à 84 °C et rester chaude pendant un certain temps après utilisation.

11.1 STO

The DC 062(-X) supports the safety functions STO (Safe Torque Off) and meets the requirements for Category 4 Performance Level "e" according to EN ISO 13849-1 and SIL 3 according to EN IEC 62061.

For this purpose, the servo amplifier has two safe inputs ENABLE 1 and ENABLE 2.

The stop brake control is not a component of the safety function. If a safe shutdown of the stop brake is required, the +24 V-BR brake supply must also be shut down externally.

11.2 Function

The safety functions in the DC 062(-X) are controlled over two digital inputs.

The following table shows the status that the ENABLE 1 and ENABLE 2 inputs must assume to enable normal operation or trigger the safety function.

Input Status		Description
ENABLE 1	ENABLE 2	Safe status of the drive system
Open	Open	
Open	Low	
Low	Open	
Low	Low	
Low	High	
High	Low	Drive system ready
High	High	

If the ENABLE 1 and ENABLE 2 are changed from any status to the "Drive Ready" status, the servo amplifier is not immediately enabled. In order to set the system to the status "Drive system ready", a change from "Low-Low" to "High-High" has to be executed. The reason for this is that, for example, sticky contacts of switching devices are detected.

11.3 Function Test

The safety function test is required to ensure correct operation. The entire safety circuit must be tested for full functionality.

Tests must be performed at the following times:

- After installation
- In regular intervals, or at least once a year

WARNING



If the function test results in an invalid machine status, the error must be found and corrected before the safety function is retested. If the error reoccurs during the function test, the machine can no longer be operated.


Si le test de fonctionnement aboutit à un état machine non valide, l'erreur doit être détectée et corrigée avant que la fonction de sécurité ne soit de nouveau testée. Si l'erreur se reproduit pendant le test de fonctionnement, la machine ne peut plus être utilisée.


12 Wiring Examples

In the following sub chapters, wiring examples are provided. It must be ensured that all constructive measures etc. are complied with and applied in order to fulfill the requirements of the category used.

12.1 Performance Level e, Category 4 or SIL 3 - Safety PLC


To meet the requirements of category 4, performance Level "e" for EN ISO 13849-1 and SIL 3 according to EN IEC 62061, two error-proof output of a Safety PLC must be used. Cross-circuit detection between the two lines via the output tests of the STO 081 is hereby possible.

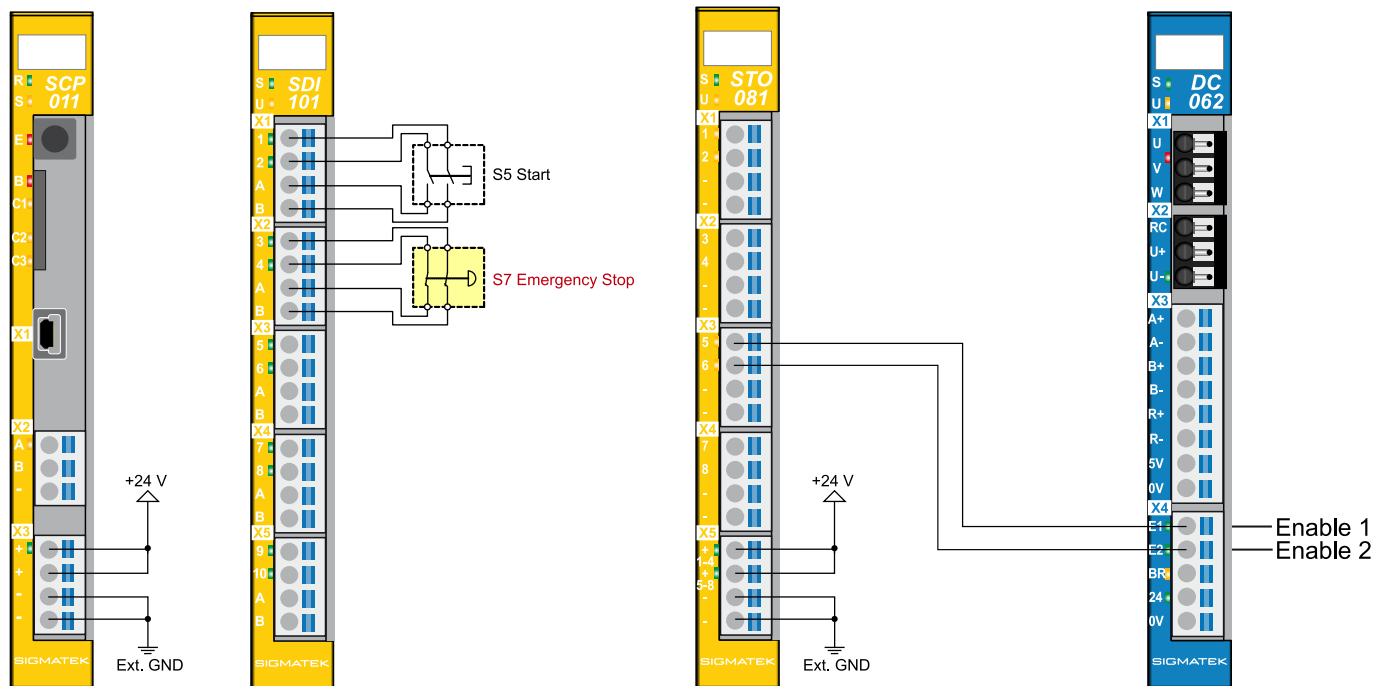


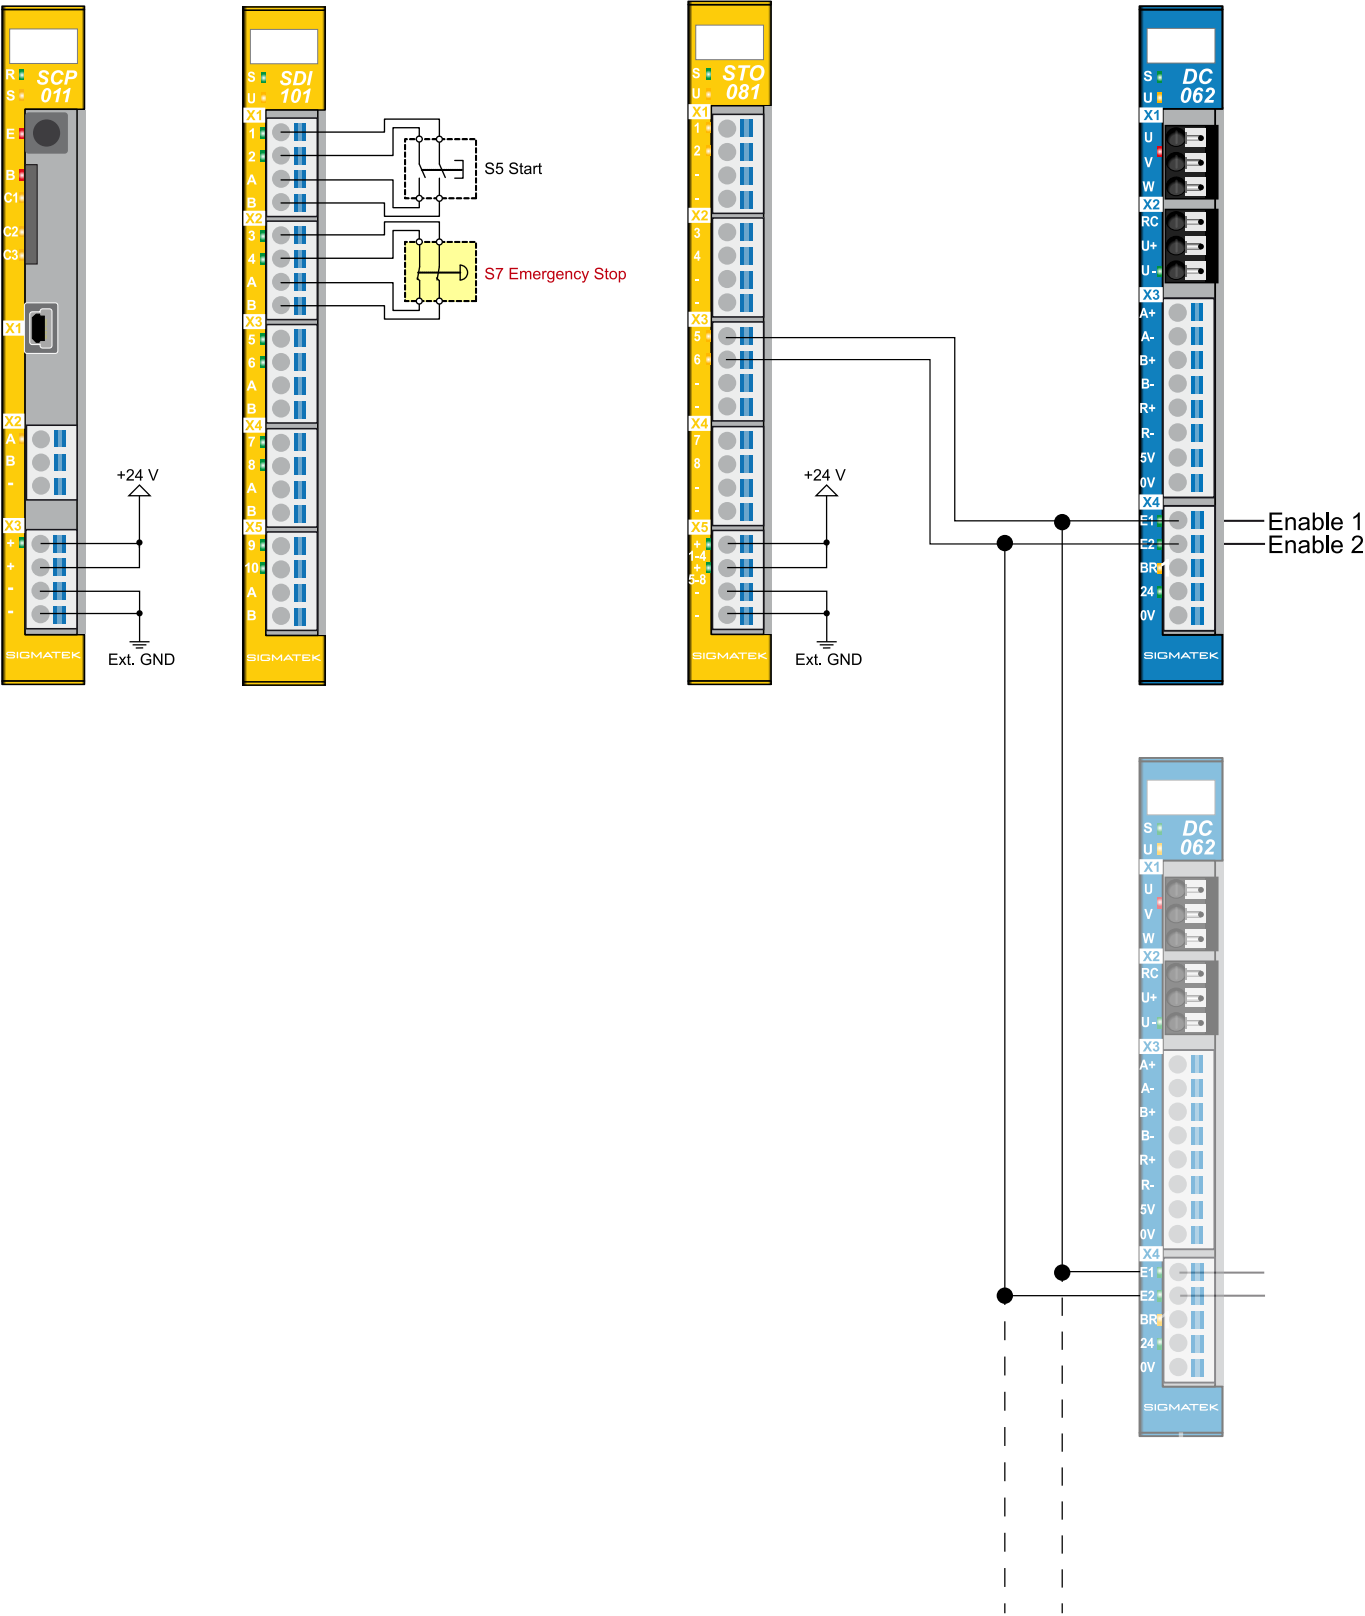

12.2 Performance Level e, Category 3 or SIL 3 - Safety PLC


To meet the requirements of safety category 3, performance level "e" for EN ISO 13849-1 and SIL 3 according to EN IEC 62061, an error-proof output of a safety PLC must be used. The reason of category 3 here, is that cross-circuit detection between the two lines is not possible. To achieve the stated performance level, a fault exclusion for the wiring is also necessary for this connection. In addition, the wiring must be within the control cabinet.

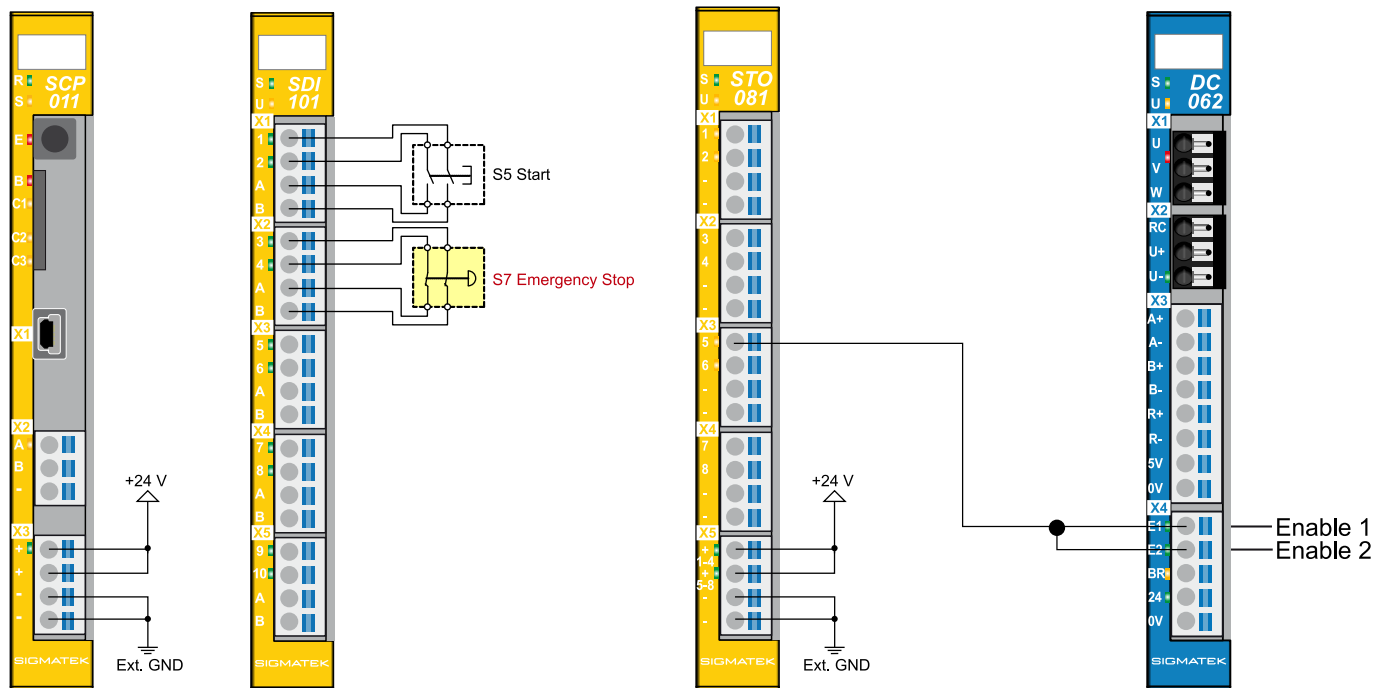


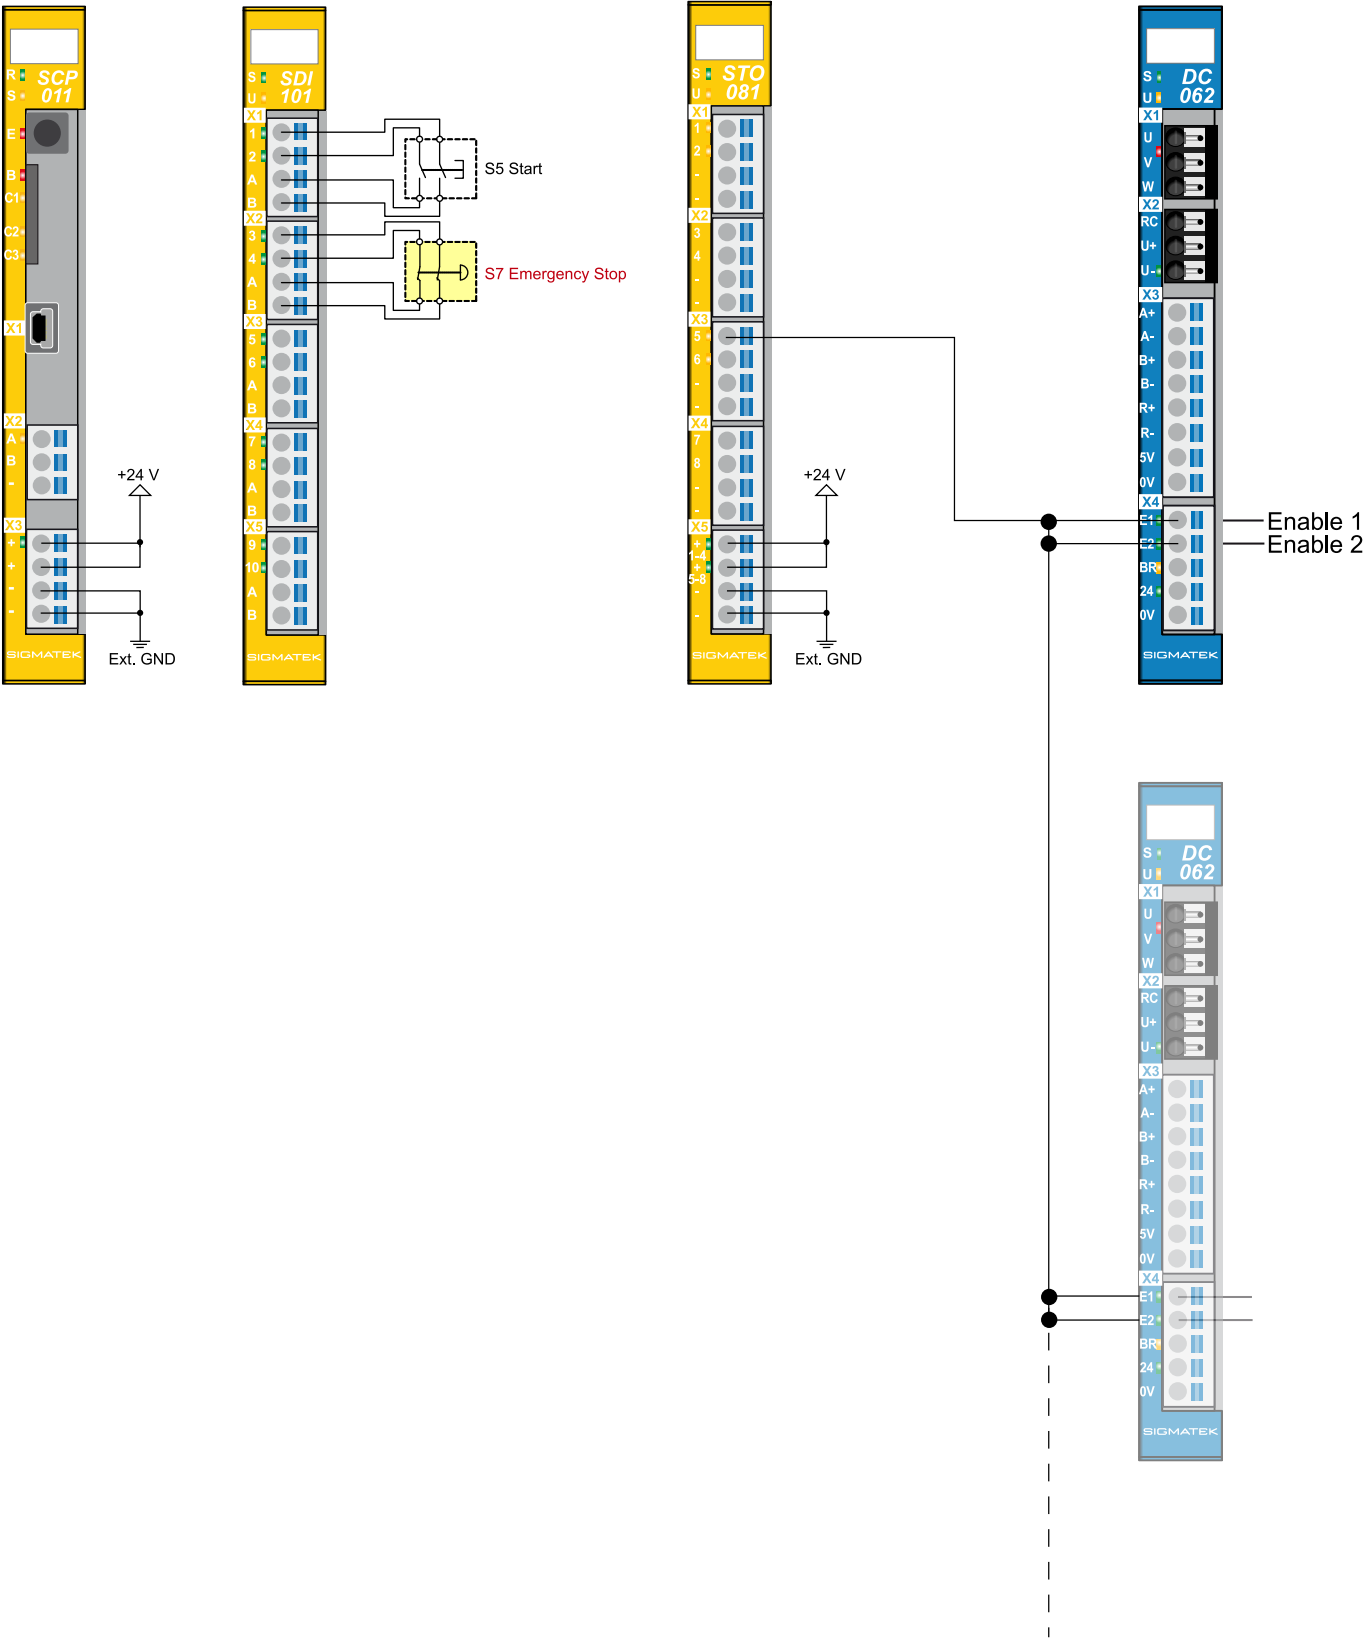

12.3 Performance Level e, Category 4 or SIL 3 - Conventional


To meet the requirements of safety category 4, performance level "e" for EN ISO 13849-1 and SIL 3 according to EN IEC 62061, the placement of the lines must comply with EN ISO 13849-2, table D.4 (separate placement, prohibiting of error via short circuits between wires) as cross-circuit detection is not possible here.

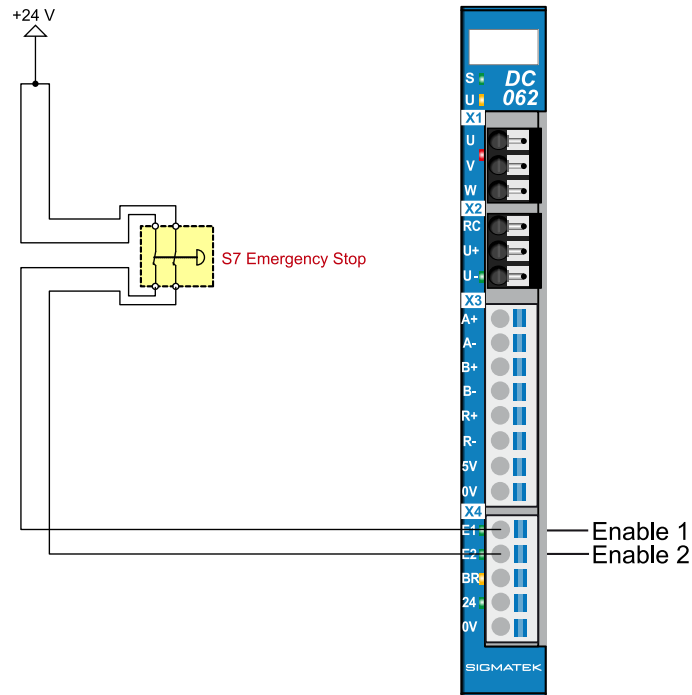


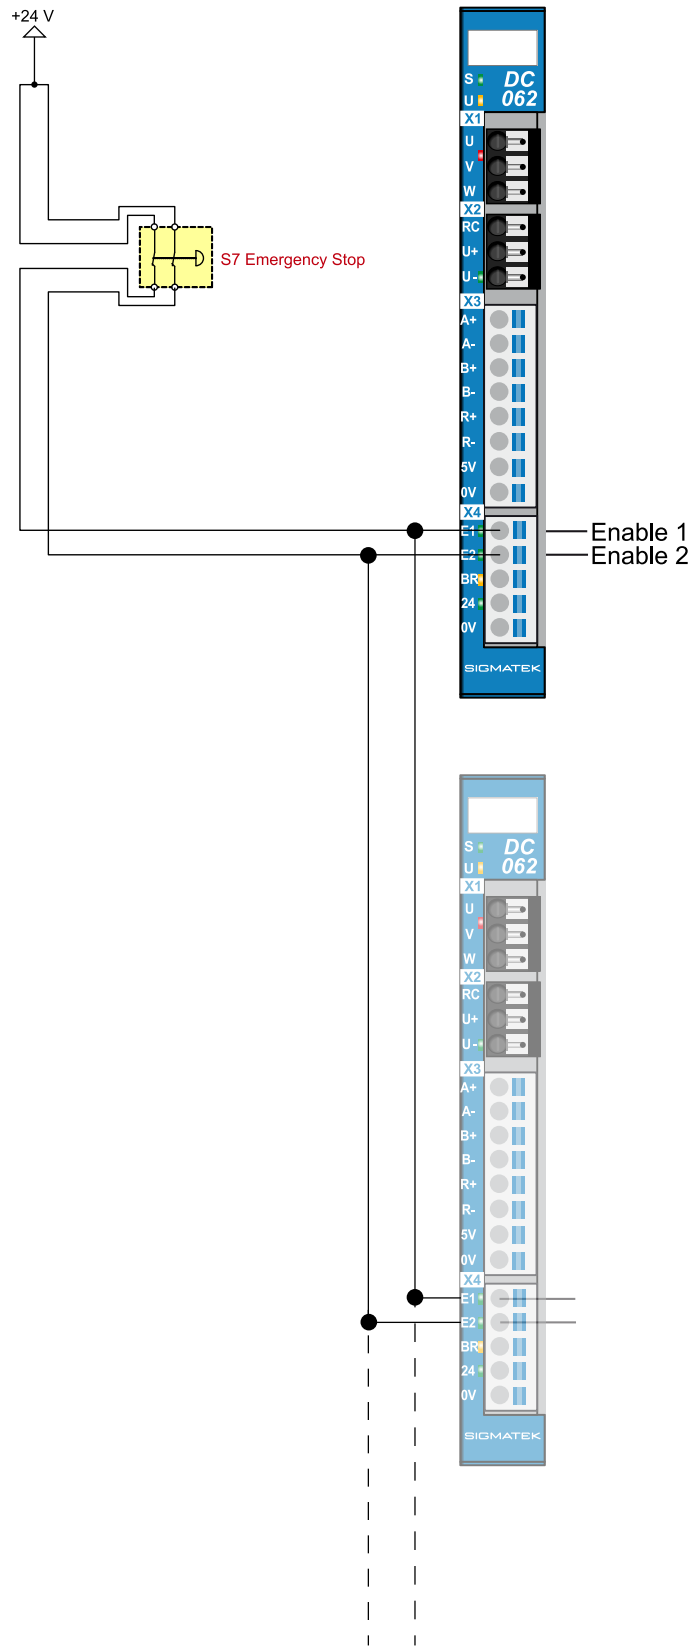

12.4 Performance Level e, Category 2 or SIL 2 - Conventional

This involves 1-channel wiring, whereby the Enable inputs are tested separately. Here, no cross-circuit detection is possible.

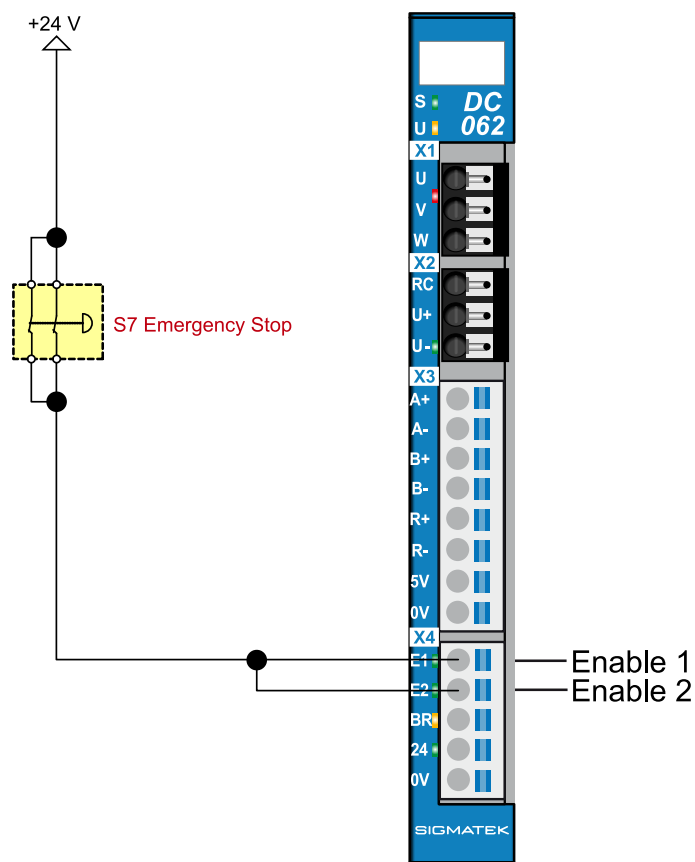

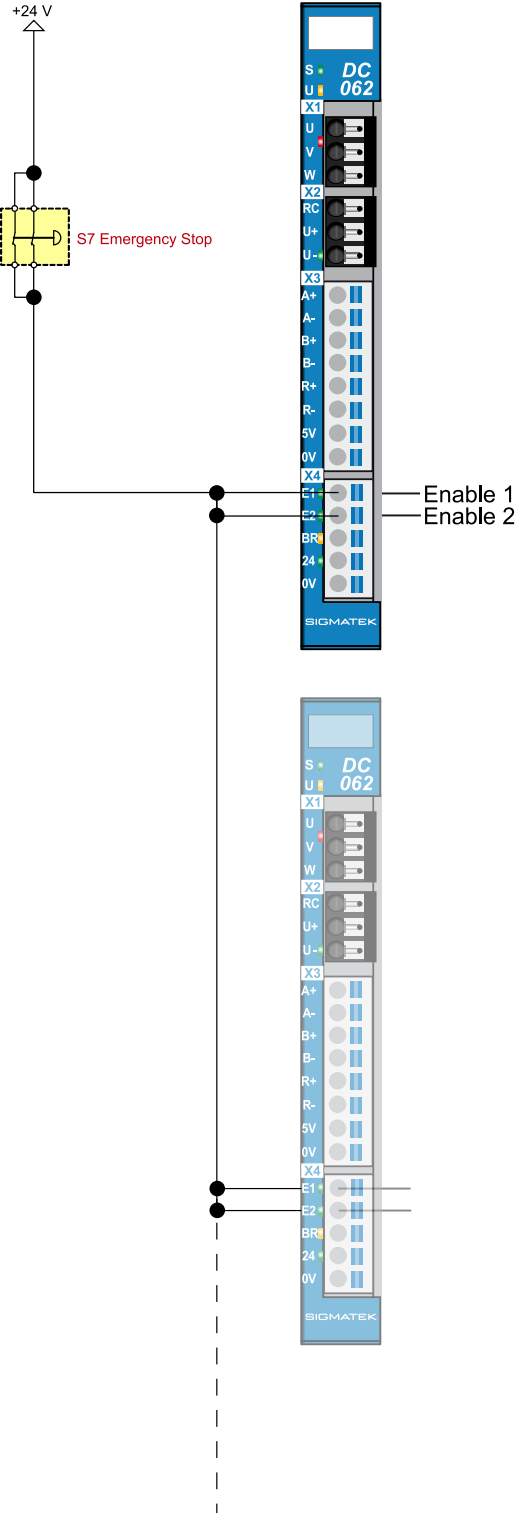

13 Assembly/Installation

13.1 Check Contents of Delivery

Ensure that the contents of the delivery are complete and intact. See chapter 1.3 Contents of Delivery.

INFORMATION




On receipt and before initial use, check the device for damage. If the device is damaged, contact our customer service and do not install the device in your system.


Damaged components can disrupt or damage the system.

13.2 Mounting

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules, a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The functional ground connection from the module to the DIN rail is made via the grounding lug on the back of the S-DIAS modules. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation to ensure proper function up to the maximum operating temperature.

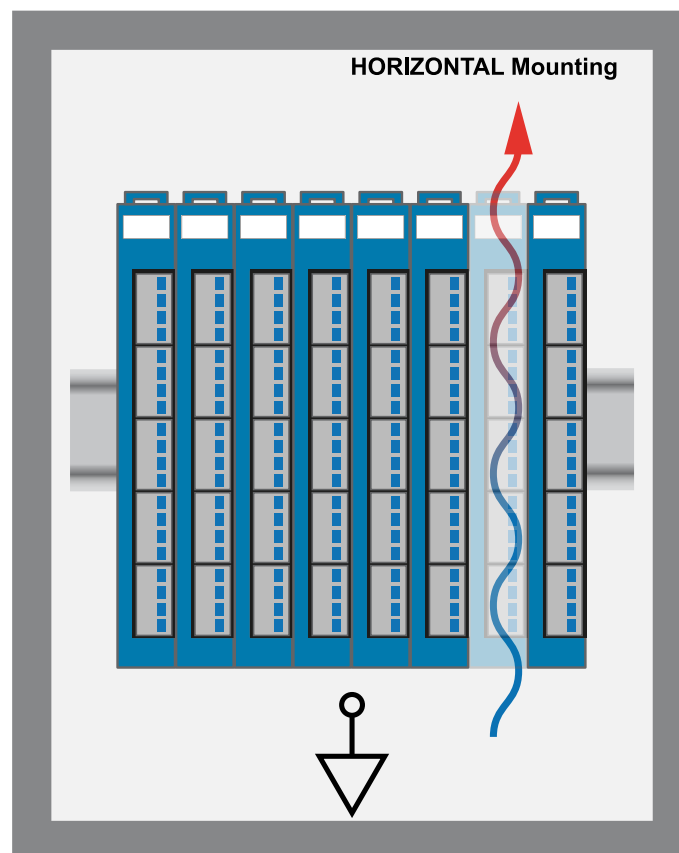

Recommended minimum distances between the S-DIAS modules and the surrounding components or control cabinet wall:

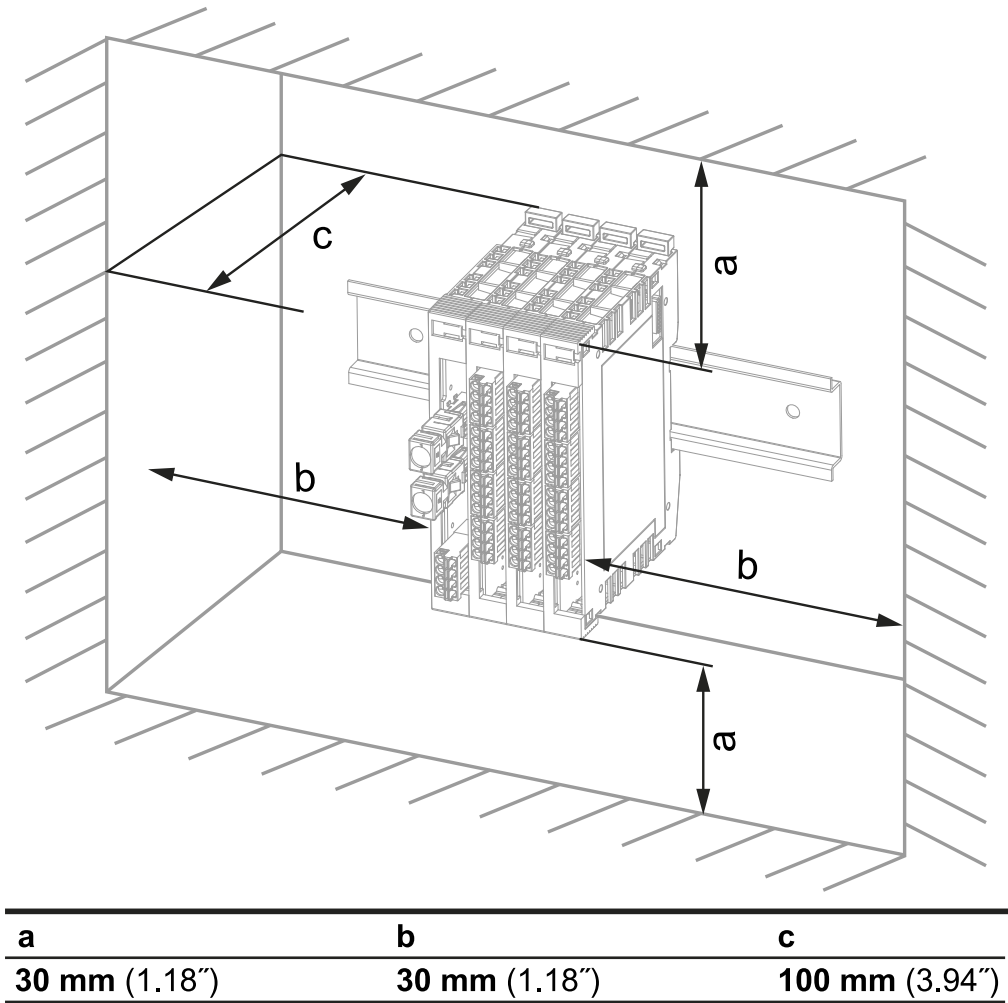

a, b, c ... distances in mm (inches)

14 Transport/Storage

This device contains sensitive electronics. During transport and storage, high mechanical stress must therefore be avoided.

For storage and transport, the same values for humidity and vibration as for operation must be maintained!

Temperature and humidity fluctuations may occur during transport. Ensure that no moisture condenses in or on the device, by allowing the device to acclimate to the room temperature while turned off.

When sent, the device should be transported in the original packaging if possible. Otherwise, packaging should be selected that sufficiently protects the product from external mechanical influences. Such as cardboard filled with air cushioning.

15 Storage

When not in use, store the device according to the storage conditions. See chapter 14 Transport/Storage.

INFORMATION



During storage, ensure that all protective covers (if available) are placed correctly, so that no contamination, foreign bodies or fluids enter the device.

16 Maintenance

During maintenance as well as servicing, observe the safety instructions from chapter 2 Basic Safety Directives.

16.1 Service

This product was constructed for low-maintenance operation.

16.2 Repair

In the event of a defect/repair, send the device with a detailed error description to the address listed at the beginning of this document.

For transport conditions, see chapter 14 Transport/Storage.

17 Disposal



INFORMATION

Should you need to dispose of the device, the national regulations for disposal must be followed.

The device appliance must not be disposed of as household waste.



18 Supported Cycle Times

The DC 062(-X) can be accessed via the S-DIAS bus with different bus cycle times.

18.1 Cycle Times below 1 ms (in μs)

50	100	125	200	250	500
					x

x = supported

18.2 Cycle Times equal to or higher than 1 ms (in ms)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x = supported

17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x

x = supported

Changes Chart

Change date	Affected page(s)	Chapter	Note
29.01.2015	14	6.1 Motor Driver Specifications	Operating Voltage to +18-55 V changed
	16	6.6 Electrical Requirements	Operating Voltage to +18-55 V changed
30.01.2015	23	8.2 Applicable Connectors	Added note concerning connecting the S-DIAS module while voltage is applied
10.02.2015	16	6.6 Electrical Requirements	Added note (Only suitable for connection...) Supply voltage +24 V: Class 2 added
	19	6.7 Miscellaneous	Added Standard
	19	6.8 Environmental Conditions	Added operating conditions
	28	10 Motor Overload Protection	Added Motor Overload Protection and Safety
16.02.2015	15	6.3 Regen Brake Specifications	Added, threshold regen braking on/off
	16	6.6 Electrical Requirements	Added, voltage threshold for motor voltage monitor
13.03.2015	12	4.4 Safety-Relevant Parameters	Updated table (added STO)
23.03.2015	23	8.2 Applicable Connectors	Changed connectors
26.03.2015	23	8.2 Applicable Connectors	Added connections
18.05.2015	19	6.8 Environmental Conditions	Expanded vibration resistance
16.07.2015	15	6.3 Regen Brake Specifications	Note usable regen resistor
22.07.2015	16	6.6 Electrical Requirements	Added note: Use 75 °C wires only and motor overtemperature sensing...
05.10.2015	1		Photo changed
12.11.2015	21	8 Connector Layout	Connector layout enhanced
27.11.2015	14	6.2 Incremental Encoder Specifications	TTL deleted
11.03.2016	21	8 Connector Layout	TTL deleted
31.03.2016		12 Wiring Examples	Chapter added
	29	11 Additional Safety Information	Chapter added
	25	9.1 Wiring Example	Diagram changed
28.04.2016	41	13.2 Mounting	Graphics distances
19.07.2016	29	11 Additional Safety Information	Functionality table and description text extended
	25	9.1 Wiring Example	Updated and expanded chapter
	41	13.2 Mounting	Changed environmental temperature in graphic to 50 °C
06.02.2017	16	6.6 Electrical Requirements	Added warning

Change date	Affected page(s)	Chapter	Note
19.05.2017	25	9.1 Wiring Example	Diagram replaced
17.08.2017	19	6.8 Environmental Conditions	Added operating conditions
17.08.2017	23	8.2 Applicable Connectors	Added info regarding ultrasonically welded strands
18.10.2017	24	8.3 Label Field	Added chapter
	41	13 Assembly/Installation	Graphic replaced
15.12.2017	16	6.6 Electrical Requirements	Note Servo Motor Braking added
31.01.2018	23	8.2 Applicable Connectors	Connections Weidmüller added
04.04.2018	15	6.3 Regen Brake Specifications	"Lowest possible resistance" added
18.06.2018	16	6.6 Electrical Requirements	Notes updated
13.08.2018	26	9.3 Wiring SM Motors with Tyco Connector	Chapter added
02.04.2019	12	4.4 Safety-Relevant Parameters	Correction of the safety-relevant parameters
	19	6.8 Environmental Conditions	Corrections environmental conditions
	all		Corrections due to CE
17.07.2019	16	6.5 Holding Brake Specifications	Maximum switch-off energy added
28.10.2019	14	6.2 Incremental Encoder Specifications	Info commutation search added
14.11.2019	47	18 Supported Cycle Times	Chapter added
25.11.2019	19	6.8 Environmental Conditions	Functional security added
	12	4.4 Safety-Relevant Parameters	Updated
	29	11 Additional Safety Information	SS1 removed
20.01.2020	14	6.1 Motor Driver Specifications	Operating voltage changed
	16	6.6 Electrical Requirements	Supply voltage changed
	25	9.1 Wiring Example	Info – point added
	28	10 Motor Overload Protection	Motor overtemperature added
29.01.2020	14	6.2 Incremental Encoder Specifications	Footer inserted
	21	8 Connector Layout	Changed graphic
	27	9.4 Servo Motor and Encoder Cables	Chapter added
28.02.2020	47	18 Supported Cycle Times	Text adapted
08.09.2020	42	15 Hardware Class DC 062(-X)	Chapter added
04.11.2020	41	13 Assembly/Installation	Expansion functional ground connection
28.01.2021	14	6.1 Motor Driver Specifications	PWM frequency added
25.02.2021		Document	DC 062-X added
23.04.2021	16	6.4 Enable Inputs Specifications	Output test signal Control added

Change date	Affected page(s)	Chapter	Note
01.07.2021	14	6.2 Incremental Encoder Specifications	Integrated in module
17.09.2021	16	6.6 Electrical Requirements	Note for cable lengths added
05.12.2023	4	1 Introduction	DC 062(-X) added
05.12.2023	10	3 IT Security	Chapter added
	19	6.7 Miscellaneous	Mission time and Reaction time added
	19	6.8 Environmental Conditions	Noise emissions added
	47	18 Supported Cycle Times	Description added
		15 Hardware Class DC 062(-X)	Chapter deleted
01.02.2024	12	4.3.2 EU Declaration of Conformity	Download instructions adapted
01.02.2024	12	4.4 Safety-Relevant Parameters	The safety indicators (PFH, MTTF _D) were adjusted slightly with the recertification.
21.02.2024			Hyperlinks adjusted
15.05.2026	29	11 Additional Safety Information	Info cable changed